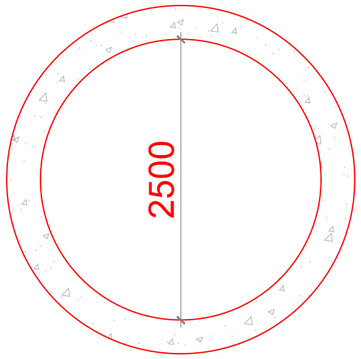

PLAN

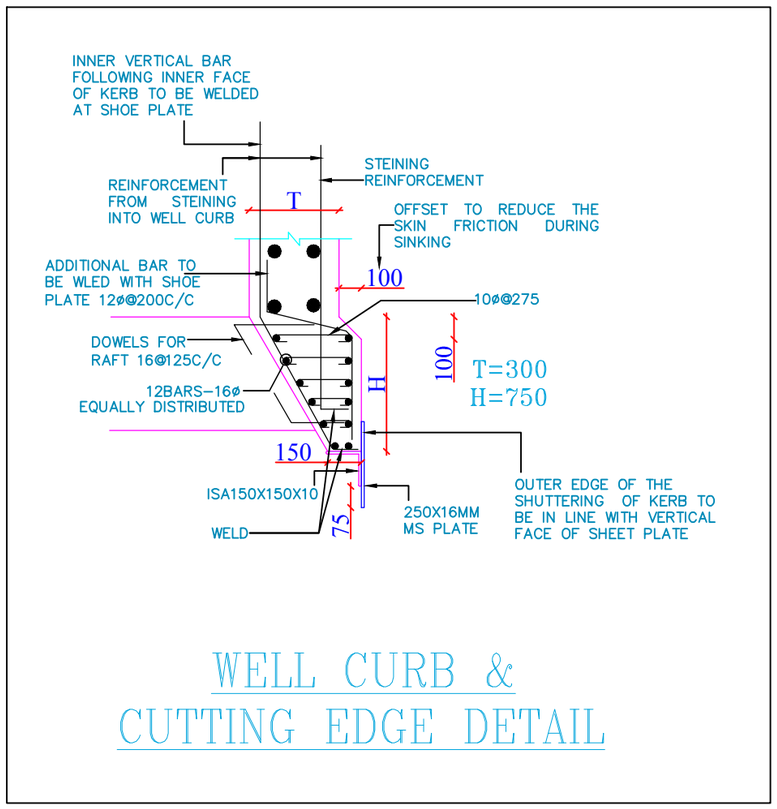

WELL CURB &
CUTTING EDGE DETAIL

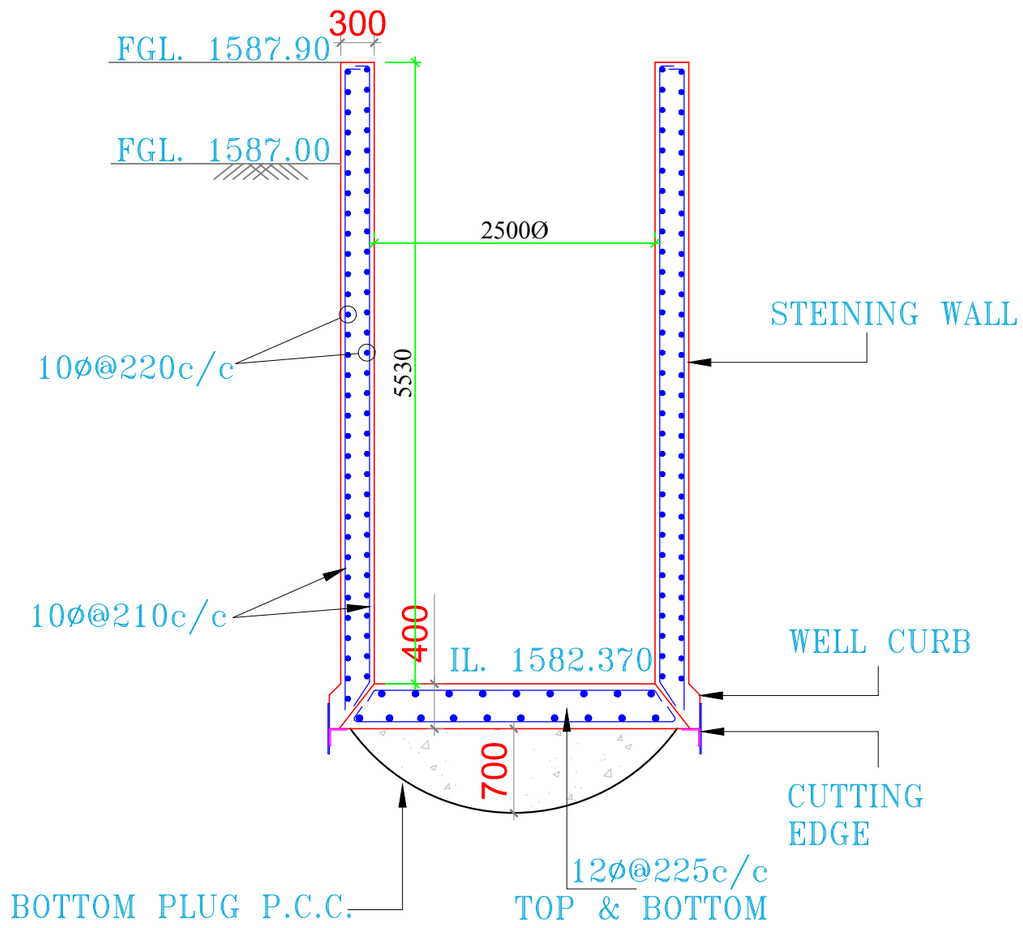

TYPICAL SECTION

PROCEDURE OF WELL SINKING

1. To prepare the ground for laying the cutting edge.
2. To cast the well-curb after laying the cutting edge.
3. To build the steining over the well-curb.
4. To remove the earth from the well pocket by manual labour or by grabbing and thus to create a sump below the cutting edge level. The well will go down slowly
5. To continue the process of building up the steining and the dredging in alternate stages. Thus the well sinks till the final founding level is reached.
6. If necessary, kentledge load may be placed on the well steining to increase the sinking effort for easy sinking of the wells.

NOTES

1. ALL DIMENSIONS ARE IN "MM" U.N.O.
2. THE SBC AT 3M DEPTH HAS BEEN TAKEN AS 4.0T/SQM
3. THE WATER TABLE AT 0.3M
4. GRADE OF CONCRETE SHALL BE AS FOLLOWS:
   - 4.1. STEINING WALL M30
   - 4.2. WELL CURB M30
   - 4.3. BOTTEM SLAB M30
   - 4.4. BOTTOM PLUG M15
5. GRADE OF STEEL SHALL BE AS FOLLOWS:
   - 5.1. REINFORCEMENT BARS FE500
   - 5.2. MS PLATE YST250
   - 5.3. ANGLE YST250
6. CLEAR COVER TO MAIN REINFORCEMENT SHALL BE AS FOLLOWS:
   - 6.1. STEINING WALL 50MM
   - 6.2. WELL CURB 50MM
   - 6.3.

NOTES:-
REF: - GA OF GATE VALVE CHAMBER
DWG.NO. - WAPCOS/M/GA/01

1. ALL DIMENSIONS ARE IN mm. UNLESS OTHERWISE SPECIFIED.
2. DO NOT SCALE WORK, TO WRITTEN DIMENSIONS ONLY.
3. DRAWING SIZE : A3

DEPTT	PMU JTFRP
PROJECT	STORM WATER DRAINAGE SCHEME, BONPURA & PADSHAHI BAGH, ZONE-1, SRINAGAR, (J&K)
TITLE: VALVE CHAMBER PLAN, SECTION & DETAILS FOR IPS (2.5M X 5.53M DEEP)	WAPCOS LIMITED
DWG. NO. - WAPCOS/C/STR/01	DATE - 30.05.2019 / REVISION : - R3